


# MD38 Body Camera


## Manual v1.1.3

Note: Please read the manual carefully before using.

Please abide by local laws and do not use this product for any illegal purpose. All consequences shall be borne by yourself.

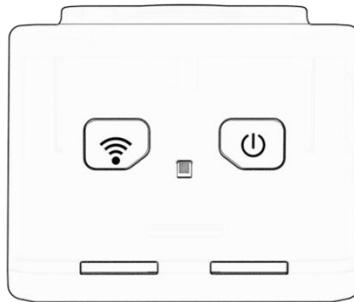

### Button introduction:

 -Power button: Press the button 2 seconds to power on or power off

WiFi Switch: Press the button 2 seconds to on or off

R-Reset Button

### Indicator Lights:

Blue Light - Recording Indicator Light: When recording, the blue light flashes; when in standby mode, the blue light stays on.

Red Light - Charging Indicator Light: When charging, the red light flashes. The red light turns off when fully charged.

Green Light - WiFi Indicator Light: When the green light is on, WiFi is enabled; when the green light is off, WiFi is disabled.

### Note:

- 1) Before using the device, insert a normal memory card (TF card) firstly.
- 2) The device memory card must be 8GB or above. Data can't be saved normally less than 8GB memory .
- 3) After power on, it will automatically enter video mode.
- 4) After the WiFi is turned on, the recording will be paused, and it can be operated within the APP.

### Charging:

This device is equipped with a rechargeable lithium battery. When the battery is low, you can connect it to a charger for charging

Note: Please use a 5V 1A charger;

The red light is on when charging, and it goes off when fully charged.

## **One. Product operation:**

### **1. Video:**

Video: Press the power button for 2 seconds to turn on the device. After turning on, the blue light flashes slowly to enter video recording mode.

Save: While recording, click the power button once to stop and save the recording, the blue light will be on, and the device will return to standby mode.

One paragraph, 5 minutes, support loop recording.

### **2. Record with charging:**

When the device is turned off, connect it to a charger. The blue light flashes, the device is recording normally. Press the power button once to stop and save the video.

Note: It is not possible to record while charging when the device is connected to a computer.

### **3. Reset:**

In case of system error or malfunctioning, need to reset the device.

Method:

Press the reset button(R) to reset.

### **4. Time setting:**

When the APP connects to the device, it will synchronize the correct time.

## **Two. WIFI Hot spot Connection Instructions:**

1. APP Download : Scan the QR code below to install, or search for "Viidure" on Google Play or the App Store to download and install.




2. Turn on the WIFI: After the device is powered on, press the Wifi button for 2 seconds. When the green light is on, the WIFI is turned on.

3. Click to add the device: Select the device hotspot: DV-MD38-XXXX, and the initial password is: 12345678.

### **Note:**

If you forget the WIFI password of the device, you can reset it to restore the default password.

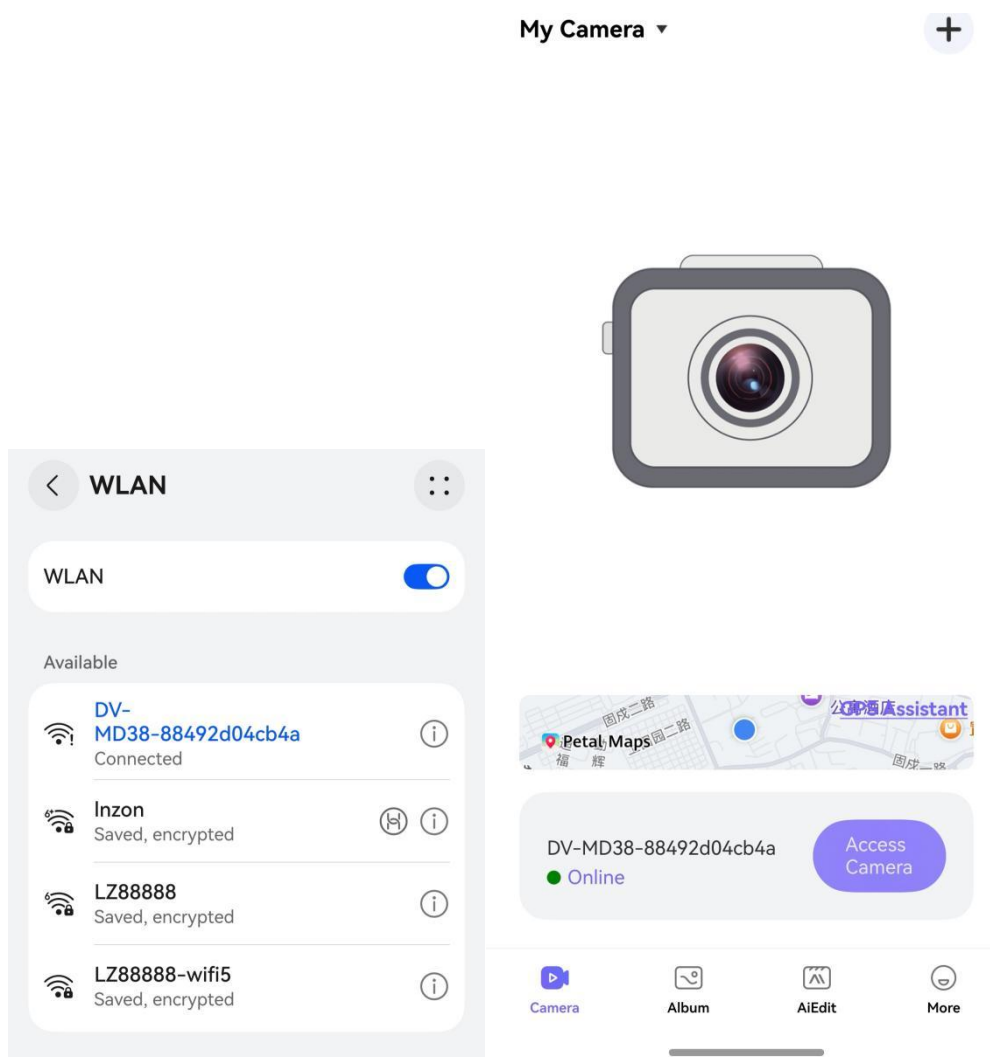

### Three. Product parameters:

- Video format: AVI
- Video coding: M-JPEG
- Video resolution: 1920\*1080
- Video frame rate: 30fps
- Motion detection record: Support
- Battery capacity: about 700mAh
- Record time: about 210 minutes
- Charge voltage: DC-5V 1A
- Storage support: 8GB-128GB
- Transmission speed: USB 2.0
- Interface type: Type-C
- Storage temperature: - 10-40 °C
- Working humidity: 15-85% RH9

### Disclaimer

1. The usage of this device is subject to the relevant national laws and

regulations, DO NOT use this product for any illegal activities.

2. DO NOT point the camera lens to the direct sun light or permanent damage may occur.
3. Keep away from fire. Never expose the device to any fire source.
4. DO NOT disassemble and modify. Doing so causes the risk of electric shock, burn injury and other health related hazard.
5. DO NOT let water, liquids, or foreign matter get inside the device. Extra precaution is advised where it is raining, snowing, near the ocean or other form of water. In case any of the symptoms are present, turn off the device immediately and contact us for further support.
6. DO NOT drop the device or permanent damage may occur.